

WebCam Underwater Housing –Pro 9000 (Logitech)

User Manual

Contents: 1. Introduction

2. Specifications

3. Function Controls

4. Set up Instructions

5. Use & Care of Housing

6. Service

7. Warranty



1. Introduction

10BAR Underwater Housings are small, light and rugged enough to be used on every dive. Use of a clear polycarbonate allows for visual inspection of WebCam condition and the O-ring seal.

10BAR Housings are designed for the ever -increasing variety of models of digital still and video WebCams. Advanced computer aided design and CNC manufacturing technologies ensure precise dimensions. Each housing body is first injection molded, and then machined to configure to individual WebCam model. A range of lens ports and controls are fitted, to tailor the housing to your WebCam model. Now you can use small WebCam with the feel and function of professional housings.

2. Specifications

Test Pressure	Housings individually tested to 10 Bar (90 m / 300 ft.) Recommended working pressure 60 m
Closure Design	
Body Material	Aluminum
Overall Size	mm (LxWxH)
Total Weight	Approximately g (Housing only)
Buoyancy (with WebCam)	Slightly negative in salt water
Features	Visible main O-ring for final pre-dive check O-ring design on housing

Accessories	Spare main O-rings (included) Silicone O-ring grease (included) Carrying bag (optional) 10m Extension Cable (included) Logitech QuickCam® Pro 9000 (optional) 40m Extension Cable (optional)
-------------	---

3. Function Controls

3.1 Buttons & Parts

3.2 Control Details

You must install the drive and software of Logitech QuickCam® Pro 9000 WebCam before you use it. For the full list of WebCam functions and settings accessed by each control, please consult the Logitech QuickCam® Pro 9000 WebCam instruction manual.

4. Set up Instructions

4.1 Special note on responsibility for watertight integrity

Each housing is individually inspected and hydrostatically tested in the factory. The design of the main piston O-ring seal is among the most reliable in the industry and the watertight integrity is excellent. This special O-ring design provides a perfect seal even if there is any movement between the body and lid due to change of ambient pressure. However please note that responsibility for ensuring the integrity of the watertight seal lies entirely with the user. 10BAR accepts no liability for damage to, or loss of any equipment used with, or placed inside the housing. *Users are highly recommended to carry out in-water test of the housings without installing of the WebCam for their first dive, after change of new ports or alternation of any new configuration. The test can be carried out by lowering the housing with ballast to the working depth or dive down to the safe diving range.*

The O-ring seal is the main barrier between the water outside and the air space within the WebCam. It is an effective barrier only if the seal is properly maintained. The O-ring seal should be inspected before every dive. The following information is provided for guidance in using and maintaining the O-ring seal.

4.2 Maintaining the O-ring Seal

If the main body to lid O-rings are not installed, install the O-rings before diving. Their care and maintenance are critical to the watertight integrity of the housing. If the O-rings are contaminated, or not already installed; inspect, grease and install the O-rings according to the following guidelines.

4.3 Inspection, cleaning and re-instillation of the O-ring

Tools

A soft cotton bud or sponge applicator, make sure these are free of all contamination such as loose fibers, and the tube of silicone grease supplied with the housing. Note other types of silicone grease specifically for use with underwater WebCam equipment can usually also be used. It is advised to carry out the following procedure on a firm clean level surface, e.g. at a table, to prevent skidding especially when diving from a boat.

When to maintain the O-ring seal

Remove the O-ring periodically for inspection. It is not necessary to remove, clean and re-install the O-ring after every dive provided the O-rings are not become contaminated. As a rule of thumbs set up the WebCam and housing before a day's diving. If the housing is required to be opened between dives for changing memory card or re-charging batteries, make sure the outside of the housing is thoroughly toweled dry before opening up. After removing the lid and servicing the WebCam, replace the lid straight away, rather than leaving it lying around. Before replacing the lid, check the o-rings and make sure that no contamination such as dust, hair, salt, sand etc. has fallen onto the O-ring or O-ring recess, as a precaution we recommend to inspect the O-ring every time the lid is opened and to carry out the maintenance only if necessary.

Procedure



- Place the lid on a firm non-slip level surface.
- The O-ring can be extracted using an O-ring extractor tool (make sure the tool as no sharp edges). Alternatively use the flats of the thumbs to gently stretch the O-ring on two faces thus making a small loop protruding a few mm. The loop can then be grasped between finger and thumb, to pull the O-ring over the lip.

Clean the O-ring recess (the square groove where the O-ring sits) with a cotton bud.

- Inspect the O-ring all the way round its surface for damage such as cuts tears or contamination. This should be done visually and also by feeling the surface texture between finger and thumb.
- **IF THE O-RING IS DAMAGED OR SUSPECTED OF BEING DAMAGED, DISCARD IT IMMEDIATELY.**

A spare O-ring is supplied with your housing, or a replacement O-ring can be ordered from 10BAR. If the O-ring is contaminated or suspected of being contaminated, clean it with a cotton cloth that is free of all chemicals or contamination. After cleaning inspect the O-ring again.

Once the O-ring has been inspected and verified fit for use, apply a small amount of silicone grease to the O-ring. The silicone grease must be evenly distributed round the O-ring. Replace the O-ring into the groove; run a finger round the O-ring, to make sure it is snugly seated in the groove.

4.4 Mounting the WebCam in the housing:

Replace the lid and make sure the lever is perpendicular to the side wall of the housing. Lock the lid by press down the lever and turn until the lever is parallel to the side wall of the housing. After replacing and locking the lid, make a final visual inspection of the main O-ring for contamination.

Note: If the O-ring is in good contact, a thin black line, about 0.5 to 1mm in width should be visible, where the O-ring is in contact with the lid. Follow this line all the way round the edge of the seal, as a final check that the seal is good.

The housing is now ready for the dive.

Important !!! Check the o-ring seal on the lid and should see an even and continuous pressed o-ring path of about 0.5 – 1 mm thick

5. Use & Care of Housing

5.1 Pre Dive Function Check.

Just before entering the water, make a habit of reviewing that you have carried out the proper steps to close the housing and the bulkhead is connected. Make a visual check of the O-ring seal. It is also useful to switch on the WebCam, and check that controls e.g. on/off, zoom, shutter functions operate normally.

- Check housing is closed
- Check O-ring is in the groove between the housing
- Check control button.

Always avoid submerging the housing in hot water for a prolonged time or a cleansing tank where the water may be heated up by the sun.

5.2 General Operation.

The control levers and push buttons consist of internal double O-ring seals on a stainless steel shaft. This arrangement is very reliable, however as a precaution, when operating the controls, avoid excessively rapid movements, as this may distort the O-ring. Also please allow for the fact that the WebCam takes a few seconds to power on. If the WebCam does not appear to respond to a control action, make sure that no other controls are pressing on the WebCam, i.e. locking out further actions.

Wear the wrist strap; it is easy to inadvertently let go of the housing, especially if you are distracted.

5.3 Cleaning & Storage.

The body & lid of the housing are made of 6061 Aluminum and Acrylic respectively. 6061 Aluminum is selected for its outstanding strength stiffness, hardness and toughness, While Acrylic for its crystal clear transparency and high gloss surface. Both of them have good resistance to weathering, although long-term exposure to sunlight should be avoided. Normal operating temperature range is 3°C to 36°C (Storage temperature: -10°C to 50°C)

It is good practice to rinse off your housing with fresh water after every dive. Avoid to exposure to fine sand. After a series of 10 or more dives, e.g. after a dive holiday, it is recommended to immerse the housing for 2-3 hours in warm water to dissolve any salt deposits that may have built up. No chemical cleaners should be used.

Important : For long term storage please remove the main closure o-rings from body.

5.4 Transportation.

Please protect the housing during transportation. It is recommended to remove the handle, and shutter extension, and wrap the WebCam in foam or bubble wrap.

5.5 Accidents

The impact resistance of the housing is excellent. However after an accident the alignment of the housing may have been altered. Therefore in the event of your housing suffering an impact force, e.g. being dropped, it is essential that you do not use the housing for diving. Please return the housing immediately for service and put a note inside to indicate the nature of the accident, so that the severity can be assessed.

6. Service

To ensure the continued performance of your housing, it should be serviced every year, or after every 200 dives whichever is earlier. Please note the terms for servicing the housing posted at our website. A full service will include:

Inspect all components for wears or damage (report if repair necessary),

Clean all sealing surfaces,

Replace all O-ring seals,

Hydrostatic pressure test to 10 Bar.

Note: Replacement of damaged components may require additional cost.

7. Warranty

The warranty is valid within two years from the date of first purchase. The warranty applies only to the housing itself. **10BAR does not accept any liability either implicit or otherwise for any equipment housed inside, or used together with the housing.** In the event of the housing flooding within the period of warranty, 10BAR will repair or replace the housing. Please note that disassembly of the housing will invalidate warranty. Please fill in the information below, and return a copy to 10Bar Underwater Housing at the address below, to validate the warranty.

(Copy to be retained by user)

Housing Type :	Date of Purchase :
Serial Number : (Labeled inside housing)	Dealer :
Owner's Name :	e-mail :
Owner's Address :	Tel : Fax :

Office & Showroom:

Unit C, 2/F., Wing Hin Factory Building, 31-33 Ng Fong St., San Po Kong, Hong Kong.

Tel: (852) 2573 3228 Fax: (852) 2811 9180

Email: service@10bar.com Web site: <http://www.10bar.com>

Please keep this document for future reference

(Note: due to continuous improvement the latest model housing may differ slightly from those described in this document)

(Copy to be returned to 10 Bar Underwater Housings)